


Yamaha Banshee Front Lowering Kit

Part Number 20-1006

Note: Make sure you have received a complete kit. The picture (top left) shows all the parts and how they go together.

1) Raise the front end of the quad so the front wheels are off the ground.

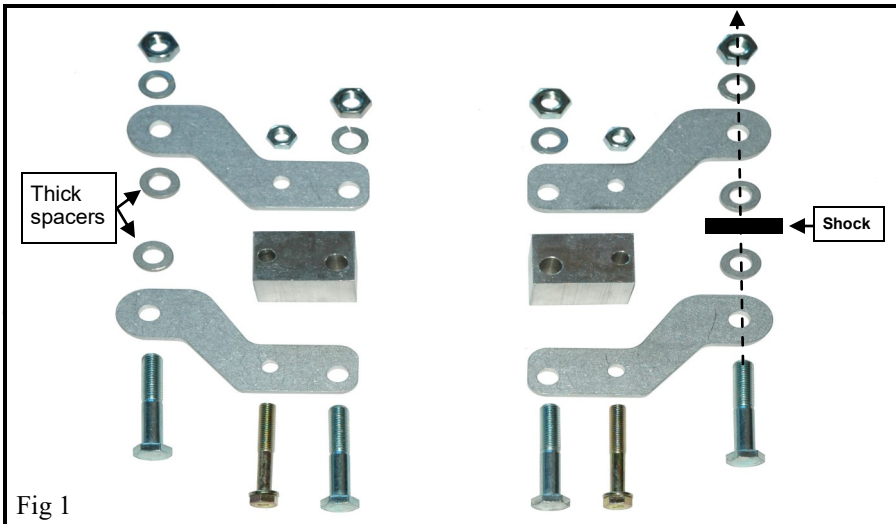

Facing the front, this is the left side.


Original shock mounting bracket. This block is in wrong! Rotate 180°



Remove upper shock mount bolt.

2) Remove the upper shock bolt and swing the shock away from mounting bracket.

3) The kit installs from the original shock mounting brackets. The large hole goes in first. This hole is offset. If the holes don't line up, rotate the block and try it the other way. (Fig.2)

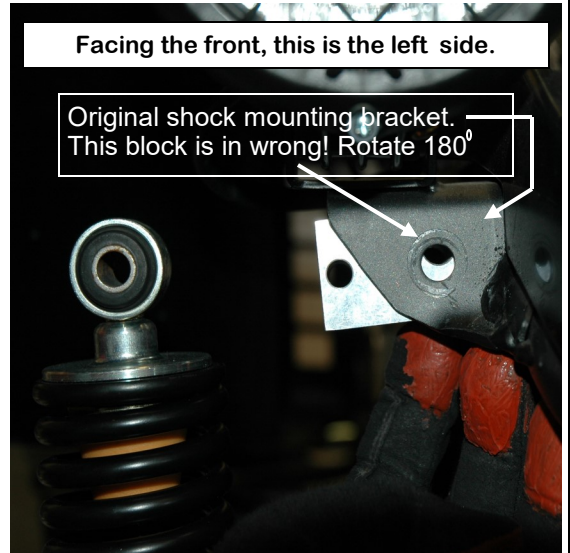


Slide the block into the shock mount. Large hole first. The large hole is offset, rotate the block until the hole lines up correctly.

Fig 2

- 4) Put the 2 bracket plates on the outside original shock mounts. Put the 2 bolts through. Put on the lock washers and the nuts. Don't tighten yet.**
- 5) Put the shock between the bracket plates. Put your bolt through the first plate, add a thick spacer, push the bolt through the upper shock mount hole, add the second spacer and push the bolt through the second plate. Put your lock washer on and then hand tighten the nut.**
- 6) Tighten all your bolts. Bounce the quad up and down and make sure no parts are rubbing.**

Note: Always use locking Washers. The locking washers prevent your bolts from coming loose due to constant vibration when riding!

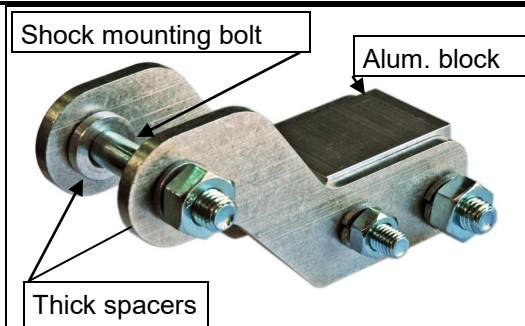

Final: Make sure you tighten all the bolts. The large bolts can be torqued 37 to 40 lbs/ft. The small bolt, 31 to 35 lbs/ft