


Yamaha Blaster Front Lowering Kit

Part Number 20-1021

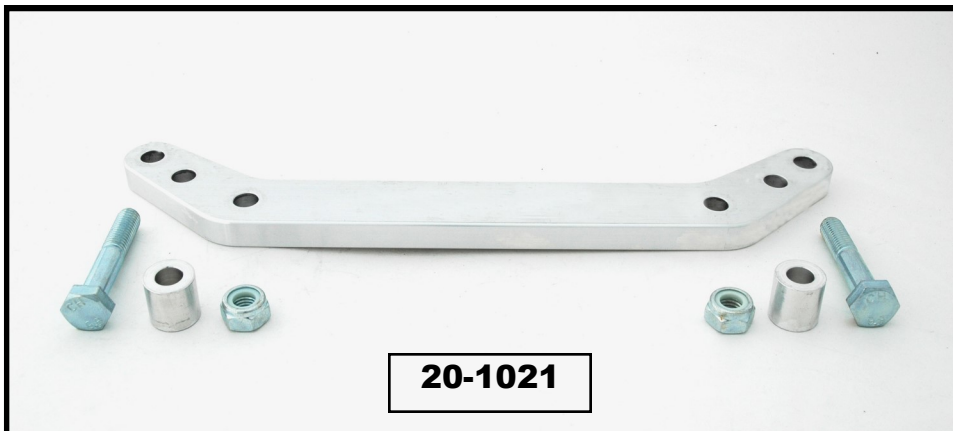

Note: Make sure you have received a complete kit. The picture (top left) shows all the parts and how they go together.

1) Raise the front end of the quad so the front wheels are off the ground.

Facing the front, this is the right side.




Front right side shock mount.

Remove upper shock mount bolt.

2) Remove the upper shock bolt and swing the shock away from mounting bracket.

3) Install the front lowering kit bracket and the bushings in the original shock mounting holes using the stock nut and bolt.

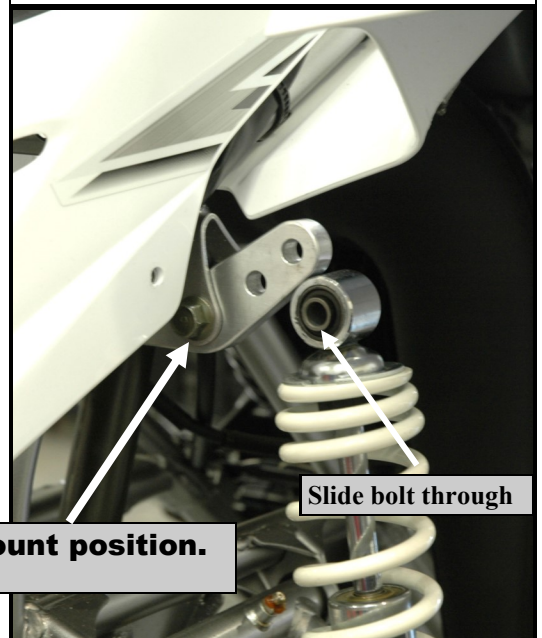

Original shock mount position.

Slide bolt through

4) Position the lowering bracket against the front of the shock bracket and the bushings against the back. Do not tighten the bolts at this time.* 5) Reinstall the shock in the desired mounting holes using supplied hardware, lower the bike, then tighten all bolts.

*Due to manufacturing variances, it may be necessary to bore the lowering bracket mounting holes for proper fit.

This is how your lowering kit should look when you're done! ► Bounce front up & down, check for binding!

Note: The front lowering kit is designed for flat track or ice racing. This kit is not recommended for jumping. For further inquiries call our tech support hotline M-F, 8 to 5 PST. 949-770-5533

