

Instructions; YFZ 450 Front Lowering Kit

Part Number 20-1009

Facing the front,
this is the left side



Facing the front,
this is the right side.




Bolt kit only:
20-1009bk

Note: Make sure you have received a complete kit. The picture (top left) shows all the parts and how they go together.

1) **Raise the front end of the quad so the front wheels are off the ground.**

Facing the front, this is the right side.

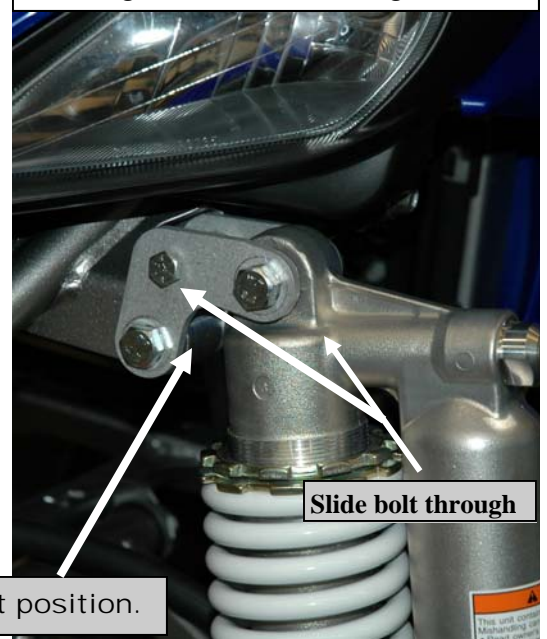

Slide bolt through

Front right side shock mount.



Remove upper shock
mount bolt.

2) **Remove the upper shock bolt and swing the shock away from mounting bracket.**

3) **Install the kit onto the original shock mounting brackets. It may be necessary to trim some parts slightly due to variations of the mounting bracket.**

Original shock mount position.

4) **Bring the shock over to the new shock position and install the cross bolt.**
5) **Repeat the same process on the other side.** 6) **Tighten all bolts and lower the ATV. Note: Be sure to check suspension for proper action. Ensure ATV has proper turn radius, and that no parts on the lowering kit are interfering with the a-arm or the shock on either side.**

This is how your lowering kit should look when you're done! ► Bounce front up & down, check for binding!

Note: The front lowering kit is designed for flat track or ice racing. This kit is not recommended for jumping. For further inquiries call our tech support hotline M-F, 8 to 5 PST. 949-770-5533

