


# Instructions; Blaster Front Lowering Kit

Part Number 20-1021

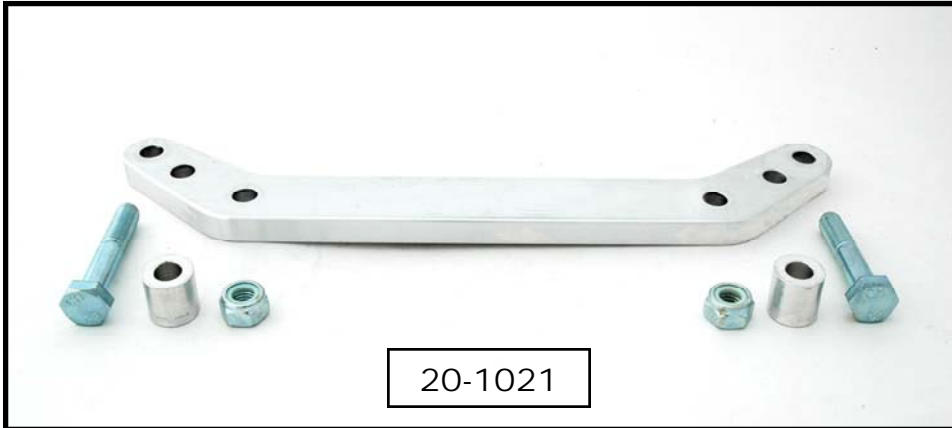

**Note: Make sure you have received a complete kit. The picture (top left) shows all the parts and how they go together.**

**1) Raise the front end of the quad so the front wheels are off the ground.**

Facing the front, this is the right side.




Front right side shock mount.

Remove upper shock mount bolt.

**2) Remove the upper shock bolt and swing the shock away from mounting bracket.**

**3) Install the front lowering kit bracket and the bushings in the original shock mounting holes using the stock nut and bolt.**

Original shock mount position.

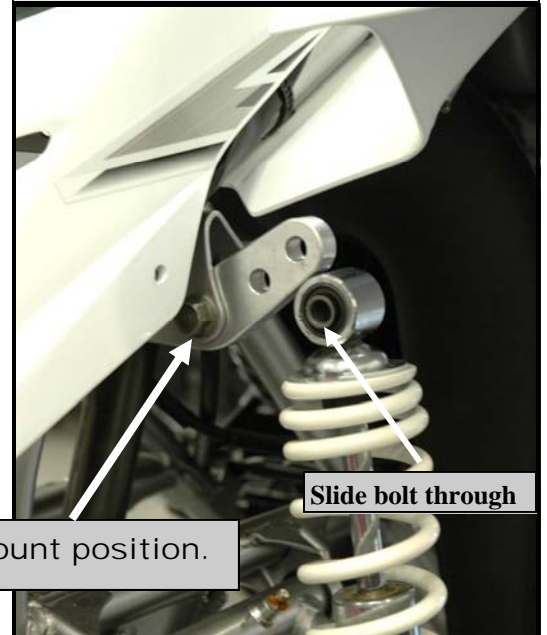

Slide bolt through

**4) Position the lowering bracket against the front of the shock bracket and the bushings against the back. Do not tighten the bolts at this time.\* 5) Reinstall the shock in the desired mounting holes using supplied hardware, lower the bike, then tighten all bolts.**

**\*Due to manufacturing variances, it may be necessary to bore the lowering bracket mounting holes for proper fit.**

**This is how your lowering kit should look when you're done! ► Bounce front up & down, check for binding!**

**Note: The front lowering kit is designed for flat track or ice racing. This kit is not recommended for jumping. For further inquiries call our tech support hotline M-F, 8 to 5 PST. 949-770-5533**

