


Instructions YFZ 450 Anti Sway Bar

Part Number 20-1700Y



Note: Make sure you have received a complete kit. The picture (top left) shows all the parts and how they go together.

1) From the front of the ATV, locate a suitable mounting spot, usually near the top of the a- arms. Brackets can flex to aid in the mounting procedure.

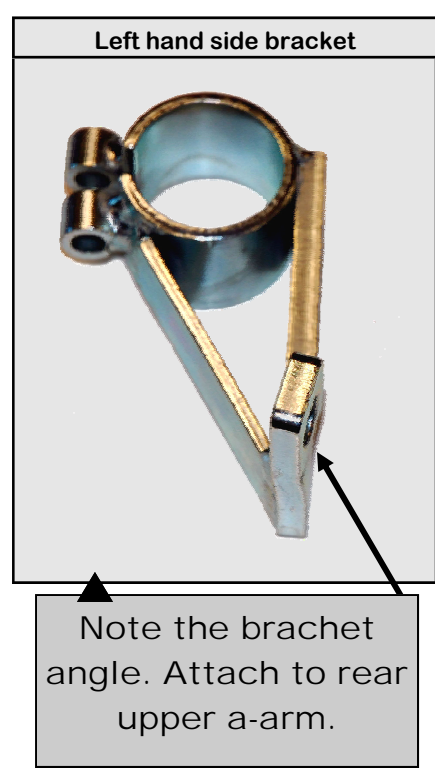


2) Remove stock bolt and mount brackets, then replace the stock bolt. Do not tighten completely. After installing bushings into tube housing, slide housing through mounting brackets, making sure both sides are even.

3) Install torsion arms to tube housing and torsion bar, then install turnbuckles to torsion arm. Finally, install turnbuckles to lower shock mount as shown at right. Adjust to proper length.

4) Install all bolts, nuts and allen screws. The chart above will show where everything fits. Make sure all parts are aligned and fit properly.

5) Tighten all bolts, and check for binding. Do not over-tighten any hardware.

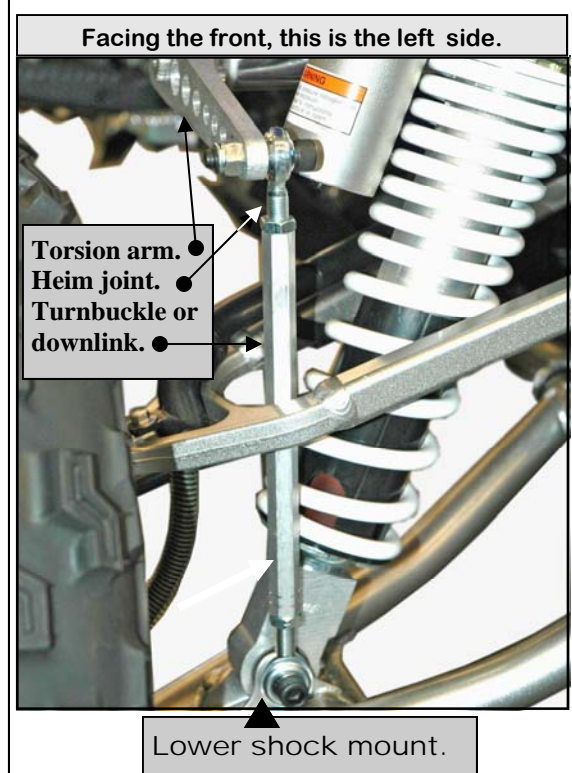

This is how your sway bar should look when you're done! Please note, Your sway bar is mounted towards the back on the YFZ 450. The mounting brackets mount to the back of the upper a-arm. When you are finished bounce the front up and down and check for rubbing parts

Note: The anti-sway bar kit is designed for flat track or ice racing. This kit is not recommended for jumping. For further inquiries call our tech support hotline M-F, 8 to 5 PST. 949-770-5533

