



Yamaha Raptor 660 Front Lowering Kit

Part Number 20-1066

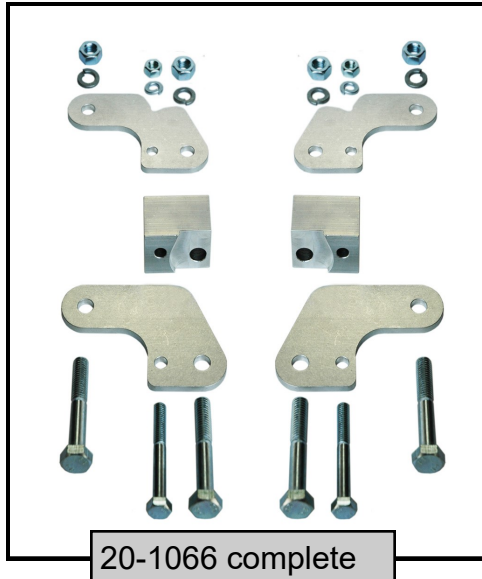


Note: Make sure you have received a complete kit. The picture (top left) shows all the parts and how they go together.


- 1) Raise the front end of the quad so the front wheels are off the ground.
- 2) Facing the front of the quad on the right hand side. Remove the upper shock bolt (fig.1)
- 3) Slide the block and the notched back plate between the shock mount. See (fig.2)

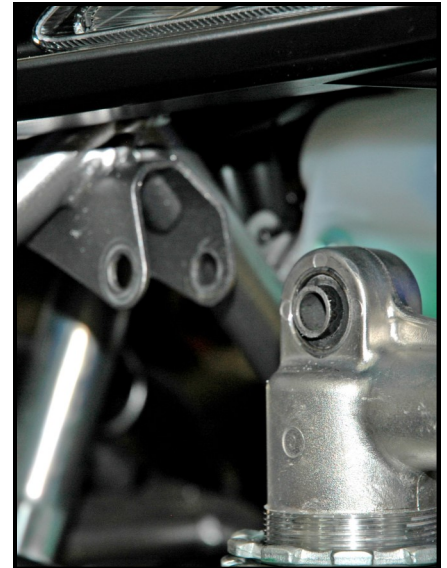

Remove upper shock mount bolt. (fig.1)

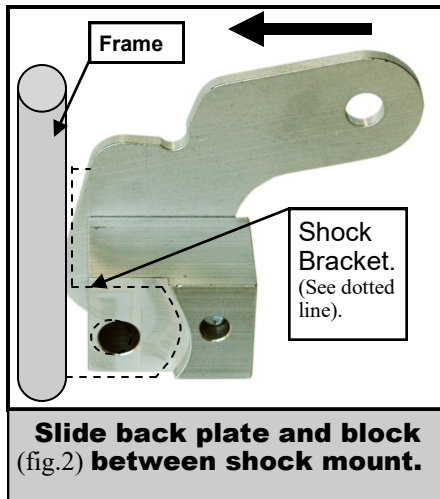

- 4) With your 2 bolts through the front plate, put the front plate on the outside face of the mounting bracket and run the bolts through the main block and out the back plate. See (fig.3)
- 5) Put your lock washers on and then the nuts. Hand tighten. Place the shock into position and put the bolt through. Hand tighten the nut.
- 6) Install the lowering kit on the left side. Lower the quad and tighten all the bolts. Bounce the front of the quad up and down and check for binding. You are finished! See (fig.4)

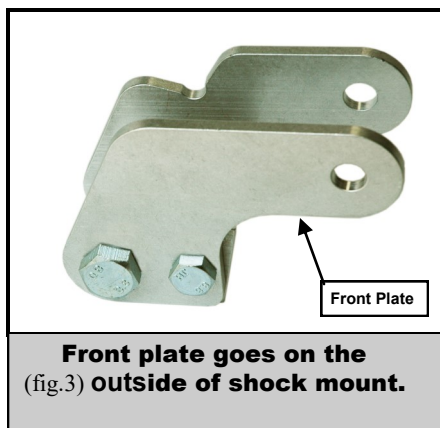

This is what your kit should look like when you are finished. If you jump or race, the kit strength exceeds the bracket strength of your frame. In some case, you may need to beef up the shock holder on the frame.

For further customer assistance or questions call our tech support hotline M-F 7:00am to 5:00pm PST time. Our friendly staff will be happy to answer your questions. Our website also has a lot of information. www.durablue.com

Durablue 20521 Crescent Bay Dr. Lake Forest Ca. 92630 949-770-5533 (www.durablue.com)