


# Yamaha YFZ 450r/x, Rap660 Anti-Sway Bar

Part Number 20-1700Y

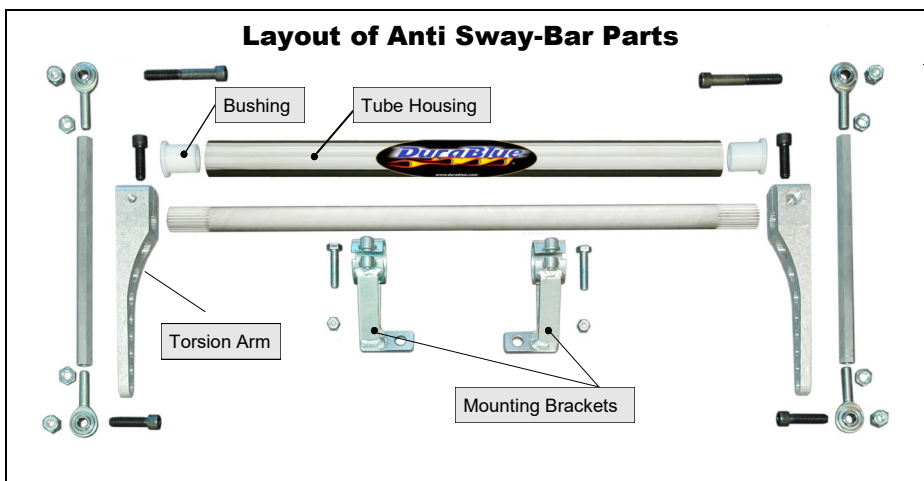

Note: Make sure you have received a complete kit. The picture (top left) shows all the parts and how they go together.

1) See the photos for the preferred mounting spot, usually near the top rear of the upper a-arms. Brackets can be bent to aid in the mounting procedure.

2) Remove the top a-arm pivot bolt/nut and mount brackets, then replace the stock bolt/nut. Do not tighten completely. Slide tube housing through mounting brackets, making sure it is centered.


3) Install torsion arms onto torsion bar, then install the turnbuckle/heim joint to the torsion arm. Finally, install turnbuckle/heim joint to the lower shock mount as shown at right. Adjust to proper length.

4) Tighten all bolts, and check for binding. Do not over tighten any hardware.

Facing the front, this is the right side.



This is how your sway bar should look when you're done! **Note that the YFZ450 requires a different mounting arrangement using this same kit.** The Anti-Sway Bar mounts in front of the a-arms with the torsion arms pointing toward the rear. In general, the torsion arms should be parallel to the ground with the turnbuckle perpendicular to the ground. Slight variations are acceptable. When you are finished, bounce the front up and down and check for binding or rubbing. Adjust as necessary.

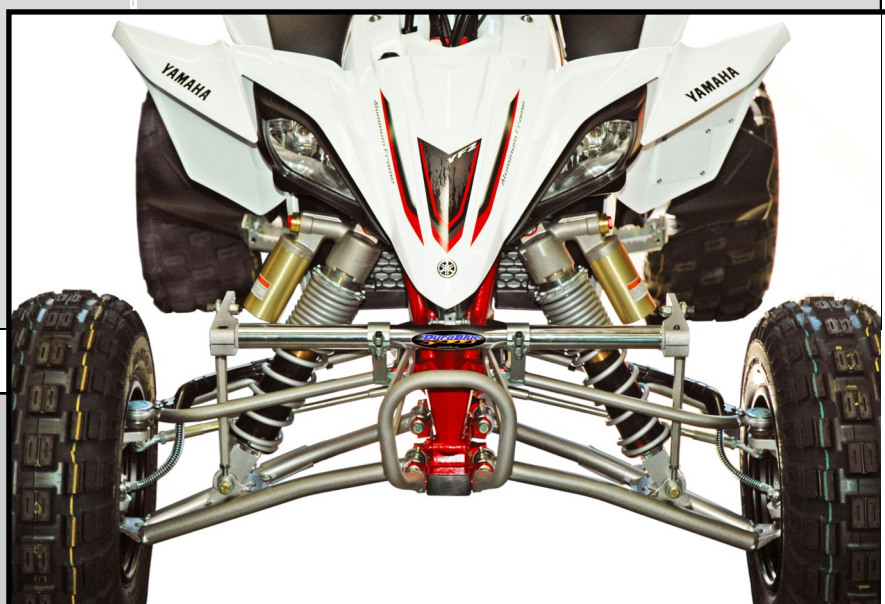

For further inquiries, call our tech support hotline  
M-F, 9 to 5 PST. 949-770-5533