


Yamaha YFZ 450 Anti-Sway Bar

Part Number 20-1700Y

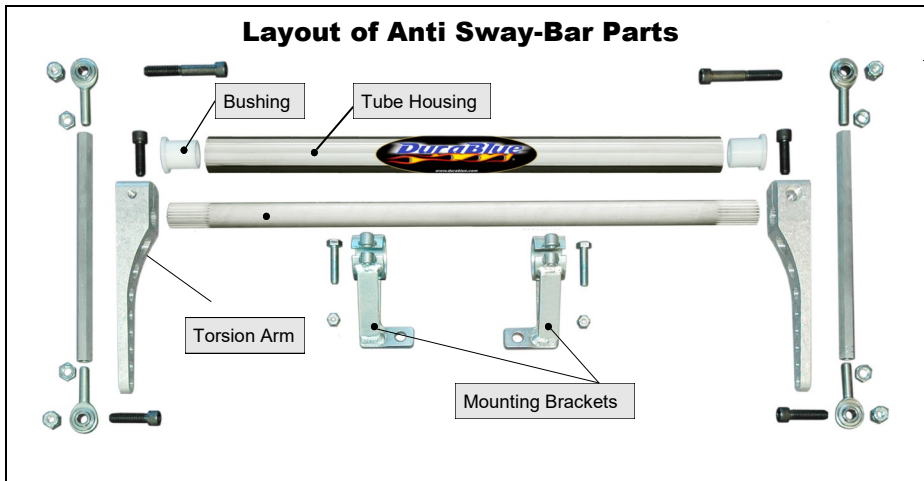

Note: Make sure you have received a complete kit. The picture (top left) shows all the parts and how they go together.


1) See the photos for the preferred mounting spot, usually near the top rear of the upper a-arms. Brackets can be bent to aid in the mounting procedure.

2) Remove the top a-arm pivot bolt/nut and mount brackets, then replace the stock bolt/nut. Do not tighten completely. Slide tube housing through mounting brackets, making sure it is centered.


3) Install torsion arms onto torsion bar, then install the turnbuckle/heim joint to the torsion arm. Finally, install turnbuckle/heim joint to the lower shock mount as shown at right. Adjust to proper length.

4) Tighten all bolts, and check for binding. Do not over tighten any hardware.

Facing the front, this is the left side.

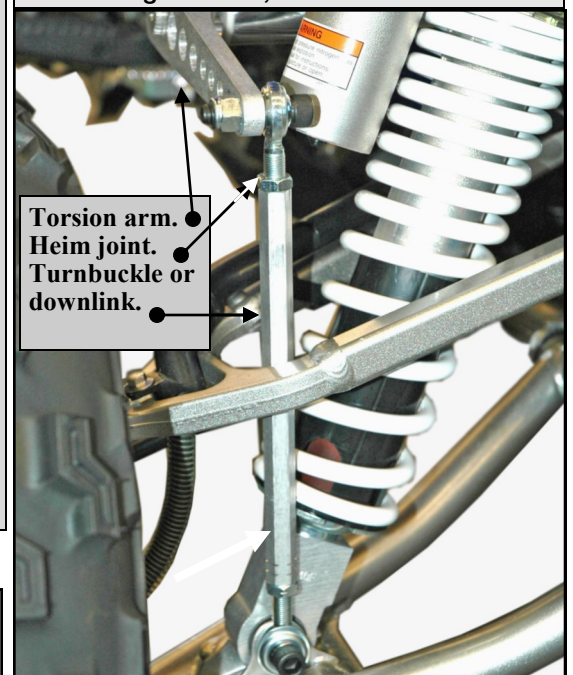

This is how your sway bar should look when you're done! Please note, your sway bar is mounted behind the a-arms with the torsion arms pointing forward on the YFZ 450 (mounting brackets mount on the back of the upper a-arm). **Note that the YFZ450r and x requires a different mounting arrangement using this same kit.** When you are finished bounce the front up and down and check for binding or rubbing. Adjust as necessary.

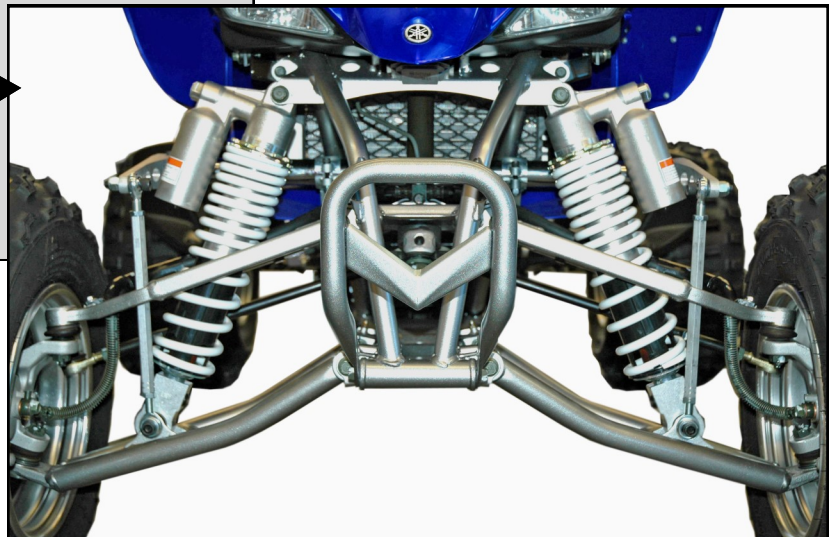

For further inquiries, call our tech support hotline
M-F, 9 to 5 PST. 949-770-5533